


Cargo-Type Slings

Continuous or Attached Style

Wide load slings support the load over a wide area to offer better balance for large loads – whether heavy or light. Wide bearing area reduces marring of soft load surfaces. Stiffeners are used at the base of the eyes to deter the body webbing from folding down the middle. Use only in a basket hitch.

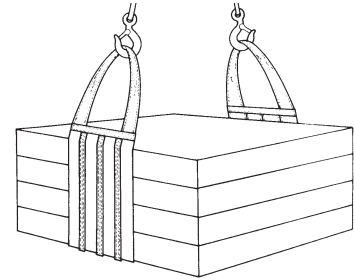

Continuous Eye Wide Load Slings

Body Width (in.)	Eye Length (in.)	Min. Sling Length (in.)	Number of Body Ply	Rated Capacity (lbs.)	Model Number (Specify Length)
6	9	40	1	15400	WL1-806
			2	28600	WL2-806
8	12	45	1	20400	WL1-808
			2	38000	WL2-808
12	18	60	1	30800	WL1-812
			2	57200	WL2-812
16	24	72	1	38000	WL1-816
			2	75000	WL2-816
20	30	88	1	45000	WL1-820
			2	90000	WL2-820
24	36	100	1	52000	WL1-824
			2	110000	WL2-824
30	45	120	1	45000	WL1-830
			2	90000	WL2-830
36	54	144	1	45000	WL1-836
			2	90000	WL2-836

Attached Eye Wide Load Slings

Body Width (in.)	Eye Length (in.)	Min. Sling Length (in.)	Number of Body Ply	Rated Capacity (lbs.)	Model Number (Specify Length)
6	10	50	1	5000	WLA1-806
			2	10000	WLA2-806
8	10	50	1	5000	WLA1-808
			2	10000	WLA2-808
10	12	54	1	5000	WLA1-810
			2	10000	WLA2-810
12	12	56	1	5000	WLA1-812
			2	10000	WLA2-812
16	12	56	1	10000	WLA1-816
			2	18000	WLA2-816
20	18	68	1	10000	WLA1-820
			2	18000	WLA2-820
24	18	72	1	10000	WLA1-824
			2	18000	WLA2-824
30	18	72	2	18000	WLA1-830
36	22	88	2	18000	WLA2-836
48	30	122	2	18000	WLA1-848

! WARNING

Do not exceed rated capacities. Sling capacity decreases as the angle from horizontal decreases. Slings should not be used at angles of less than 30°. Refer to Load Angle Charts, page 299.